

S7-Xplorer - Particularities when you using MPI/DP-adapters (e.g. IBH, Deltalogic, Siemens, etc.)

Install the software supplied by the manufacturer. Use it to set the IP address and PPI, MPI or DP parameters. You can then address the S7 via an IP address.

Enter "0" for rack and the MPI address or the DP address of the S7-CPU as slot.

Unique solution ID: #1182

Author: Steffen Falter

Last update: 2018-12-13 11:29